



STEP 7

Adjust the L-shaped bracket with the castors. Make sure the castors are put into the U-shaped slot completely and tighten the screws with a screw reamer.

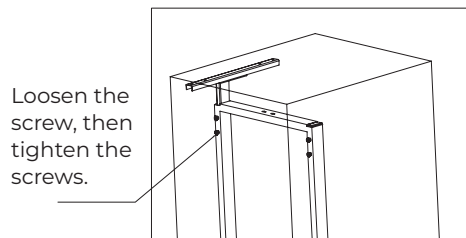


STEP 8

Install the runner protective cover.

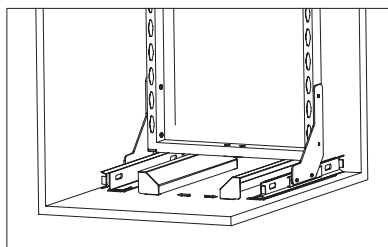

STEP 9


Install panel hangstrip.

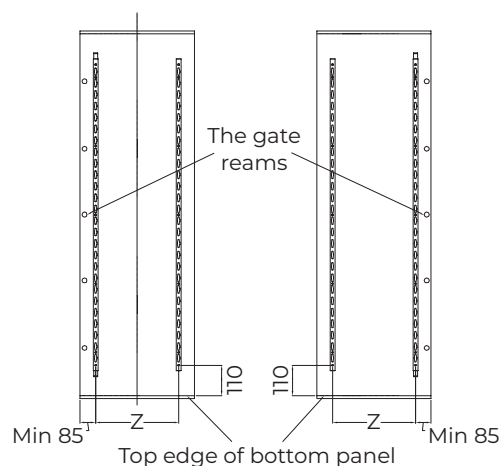

| Cabinet | Z |
|-----------|-----|
| 450 / 500 | 315 |


STEP 10

Remove screws from the connecting strip, in the sequence shown in the picture. Connect the slip frame and the top of the panel hangstrip with the connecting strip, and tighten screws. Take note of the left and right differentiation on the connecting strips.

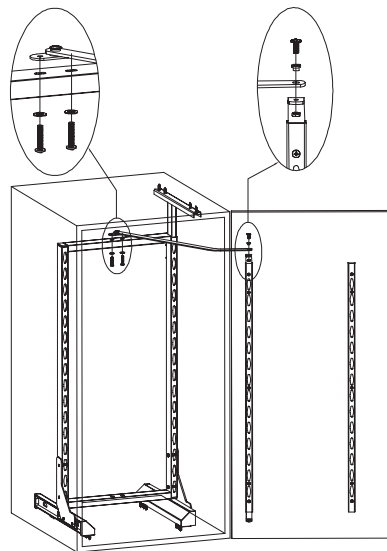

STEP 11

Remove the screws from the connecting strip, in the sequence shown in the picture. Connect the slip frame and the bottom of the panel hangstrip with the connecting strip and tighten screws. Take note of the left and right differentiation on the connecting strips.

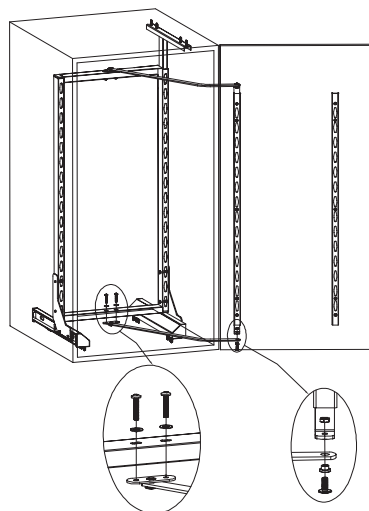


DIY Installation Guide

Tandem Larder Unit



Gelmar

Tandem Larder Unit

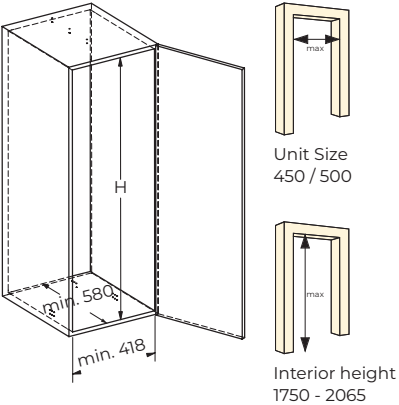

| Code | Unit Size (U) | kg | Finish | Material |
|------|---------------|------|--------|----------|
| 6297 | 450 / 500 | 50kg | CP | Steel |



1 x U-Iron



1 x L-shaped Bracket



2 x Connection Strip




2 x Runner Protective Cover



1 x Pair Runners



2 x L-shaped Iron



16 x ST3.5 Tapping Screw




25 x ST3.5 Tapping Screw


Installation

We recommend that you install a shelf at the top of your cabinet, creating more storage space and reducing the extension height of the L-shaped bracket


STEP 1
Drill 4 x 2.5mm diam holes in the the top cabinet panel, as shown in drawing below.

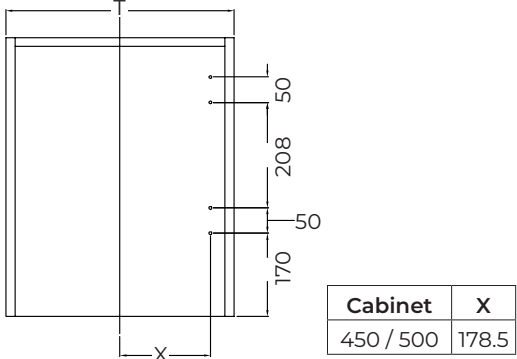


STEP 2
Drill 12 x 2.5mm diam holes in the bottom cabinet panel, as shown in drawing below.

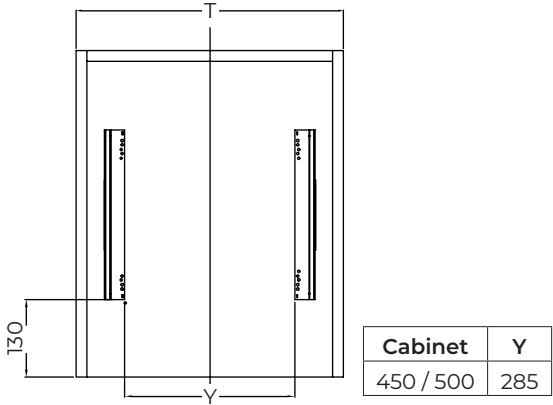


STEP 3
Install L-shaped iron.

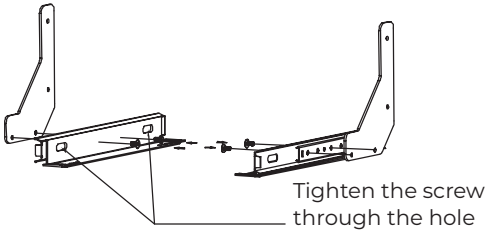

STEP 4
A: Screw the loaded screws out of the slip frame, attach L-shaped bracket with castors into the frame tube as illustrated in the picture and screw up the screws but it is not necessary to tighten them.
B: Fix the frame installed in step A to the L-shaped iron sheets with 4 screws (M6x25).
The frame can be turned around to accommodate for a left or right opening cabinet.

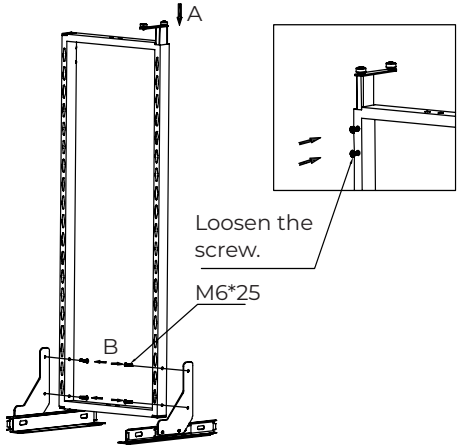

STEP 5
Fix the runners onto the bottom frame panel with 12 tapping screws (ST3.5x16).

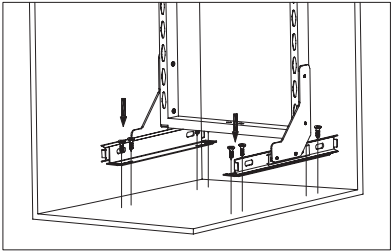

STEP 6
Fix the U-iron onto the cabinet top with 4 tapping screws (ST3.5x16).

