


Installation instruction

1.Component:

.Basket(A) 1pc

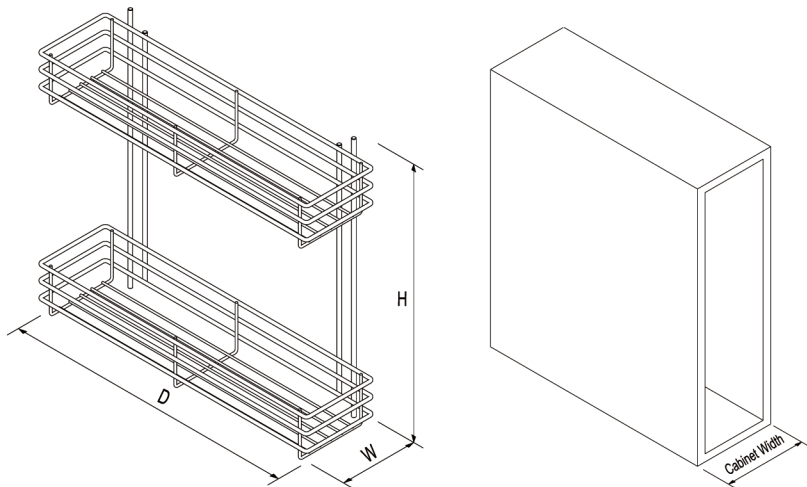


Cabinet width	Size
150	D466xW90xH372
200	D435xW126xH407
300	D472xW230xH410

.Full extention Slide(B) 1set

.ST4x16 21pcs



.M5x6 4pcs

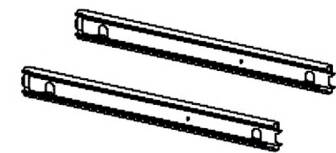

.Plastic front panel
corner(C) 4pcs


.L front panel
corner(D)2pcs

.Steel split frame 1 pc
only for W200 cabinet

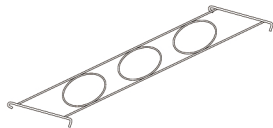


2.Information:

STEP1:Install the slide(B) on the side board by ST4x16 screws (Ref to drawing1)

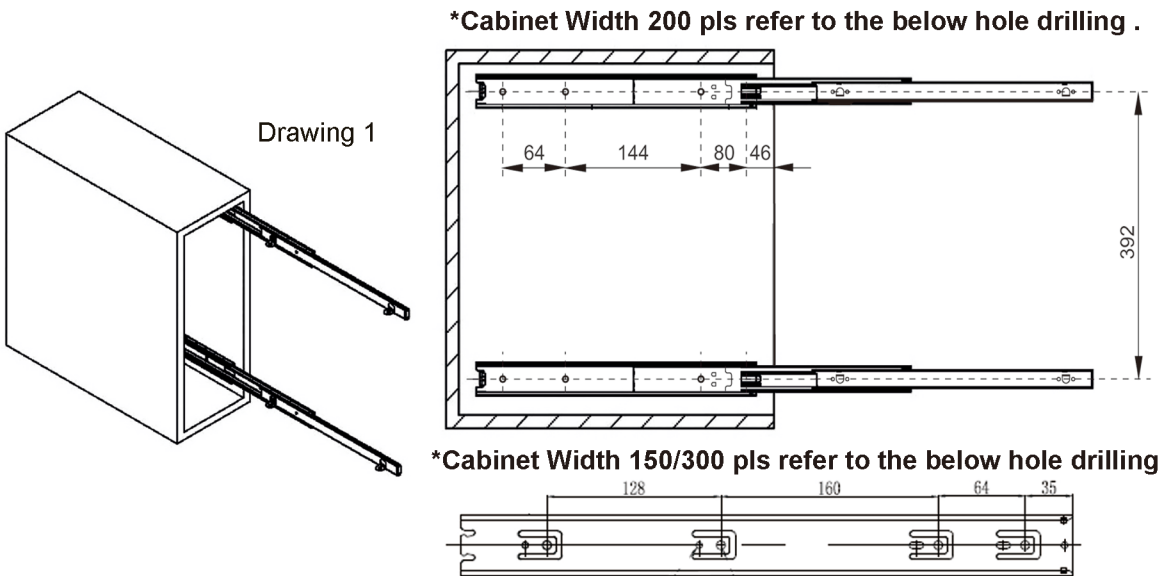

STEP2:Install the basket(A) onto the slide(B)

Install the corner(D) to the slide by
M5x6 4pcs screws

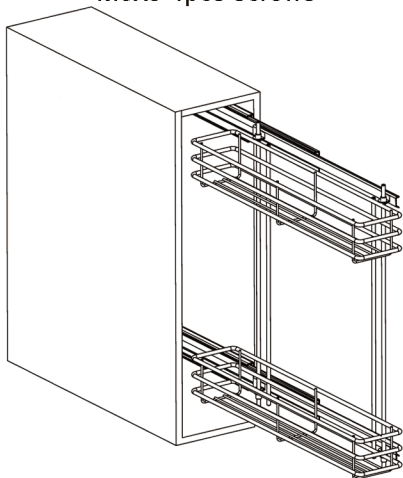

STEP3:Install the front panel by

ST4x16 screws

